


Milwaukee Pakout Bamboo Folding Table Installation Instructions



1) Install Set Screws:

Install (2) of the provided $\frac{1}{4}$ " set screws into the rear of the 3D printed rail guide brackets as shown below. Repeat this step for all (4) brackets.

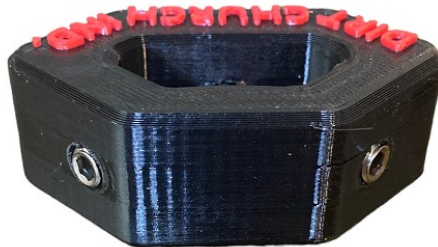


2) Install 3D Bracket On Aluminum Rail Guides:

Remove the aluminum rail guides, on either the right or left hand side of your Packout, depending upon which side of the box you want to mount the folding table. Slide the 3D printed brackets over the aluminum rails then lightly tighten the 2 set screws for the top brackets only. The bottom brackets will be left loose until the folding table legs are installed, then reattach the aluminum rail guides.



3) Mark hole locations and drill:

Mark the 1st hole location 2.0" down from the top and .50" over from the sides. Using the folding shelf bracket as a template, mark the other 4 hole locations to be drilled. Use a 3/32" bit to drill a hole .25" deep. Then install the folding shelf brackets using the provided (6) Phillips screws.

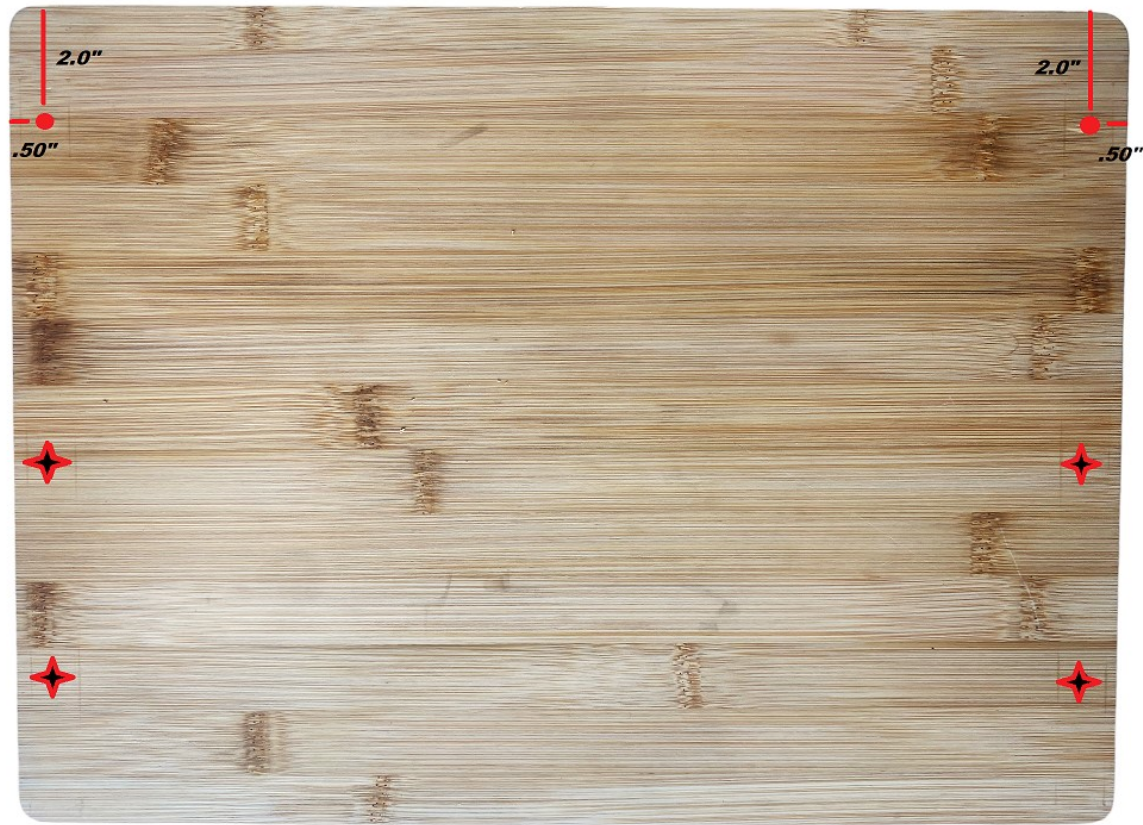

4) Final Assembly:

Using the provided (4) button head bolts install the folding table to the 3D printed brackets. Then tighten down the bottom (2) ¼" set screws. **NOTE:** You are threading into plastic so don't over tighten the fastener, lightly snug is plenty strong.



Dirt Church Industries appreciates your order.

Please take the time to leave us a review.

Questions during the assembly of this kit, we can be reached at sales@dirtchurchindustries.com.

